




Cat.6 UTP Arc Latch Plug with PVC Boot

Assembling instruction




1. Part No. Cat.6 P8-018-9 + SR-021 Boot

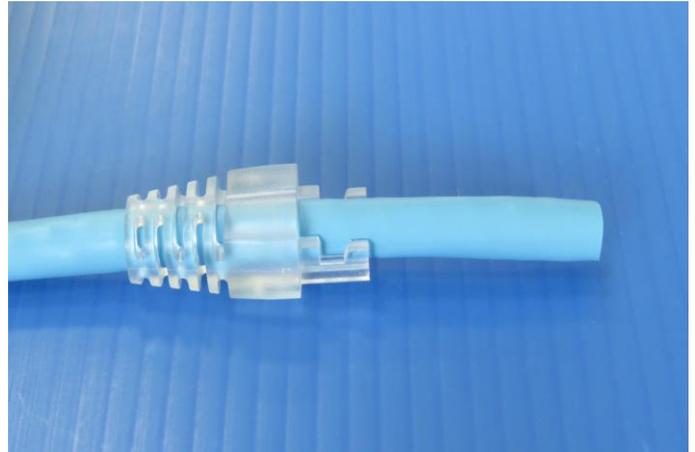


2. Push SR-021 into cable.




3. Strip and remove 15mm of jacket.

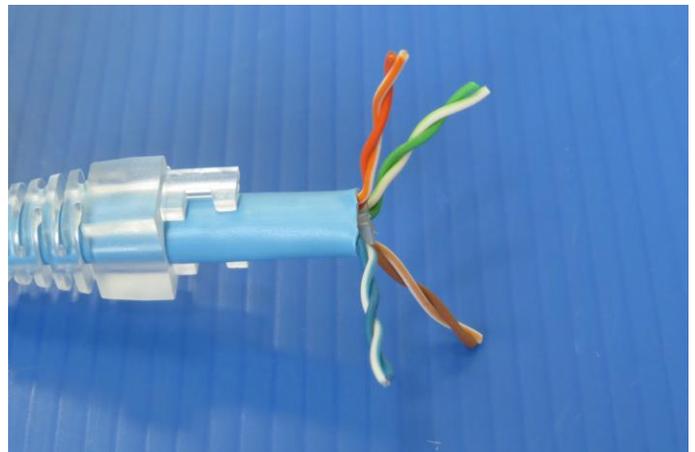

4. Trim cable cross member and separate four pairs.

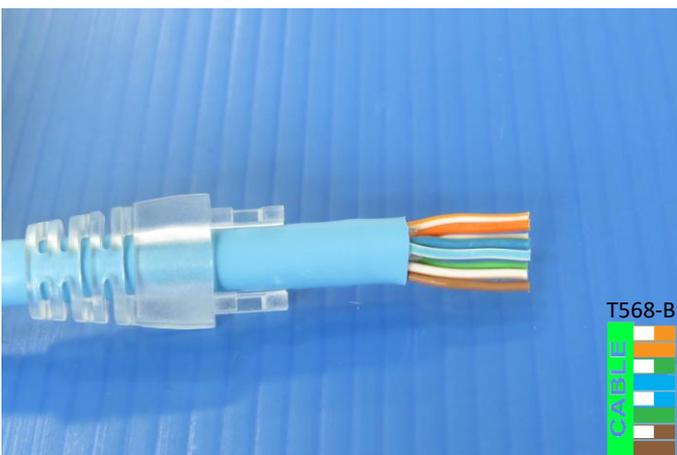

5. Arrange the wires according to TIA/EIA 568A & 568B standards.

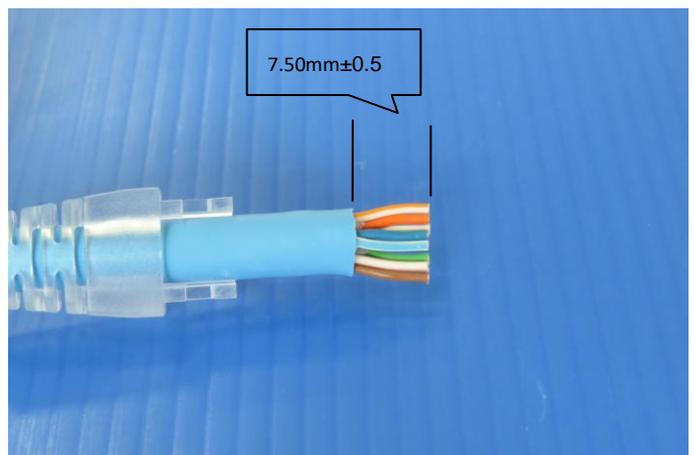

6. Cut the wire and leave around 7.5mm.



Cat.6 UTP Arc Latch Plug with PVC Boot

Assembling instruction



7. Slide into liner.



8. Push assembly into plug body.



9. Push SR-021 into plug.



10. Crimp with standard RJ45 Tool.



11. Assembly finished.



12. Assembly finished.