





乾羅科技股份有限公司
Plug Master Industrial Co., Ltd.

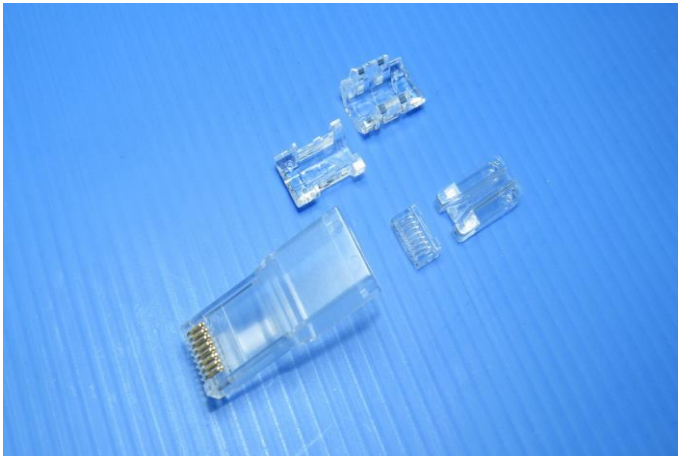


1. Part No. P8-054 C6 Plug five pieces




2. Strip cable jacket around 30mm.

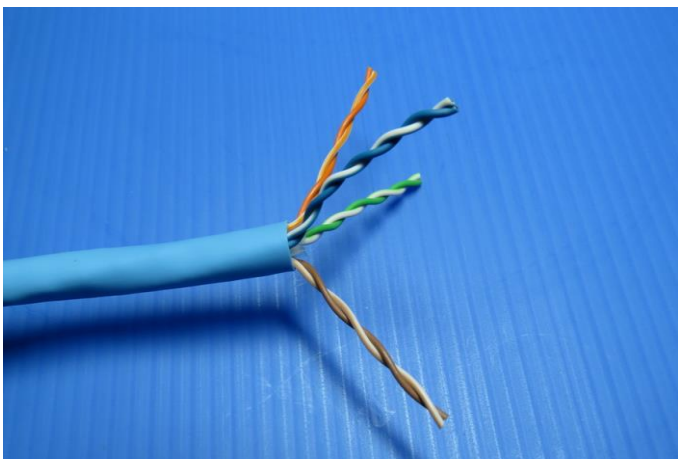


3. Cut the cross

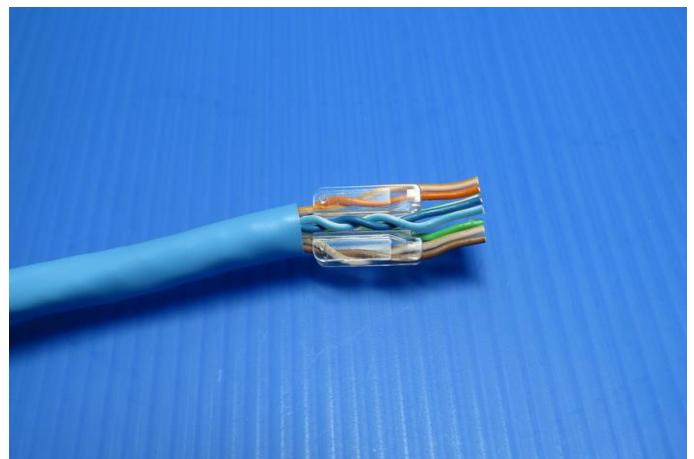

4. Slide the divider.

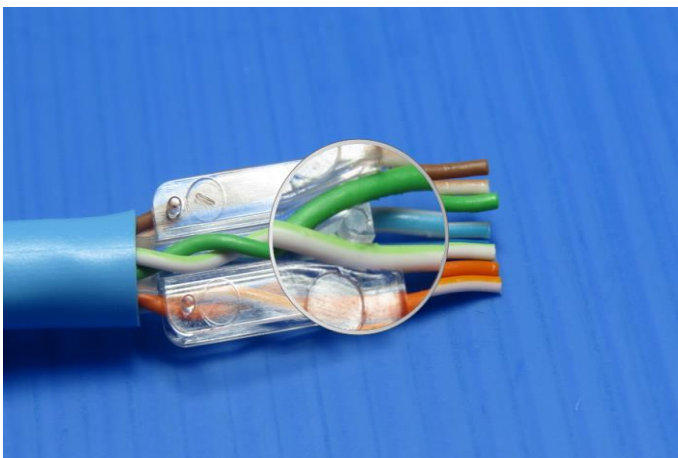

5. Note the bump on divider and put the pair of 3th and 6th here.

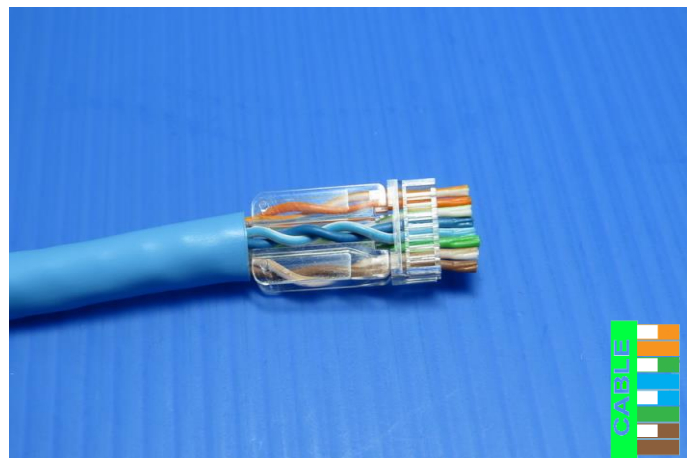


6. Slide the liner and arrange the pairs by T568-B.







乾羅科技股份有限公司
Plug Master Industrial Co., Ltd.

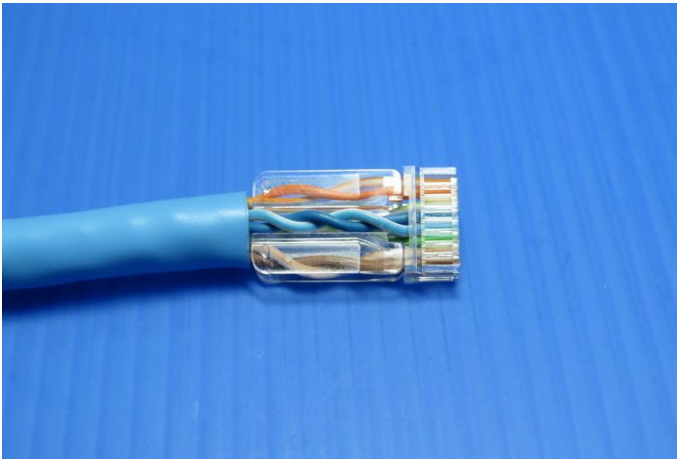

7. Trim the rest wires

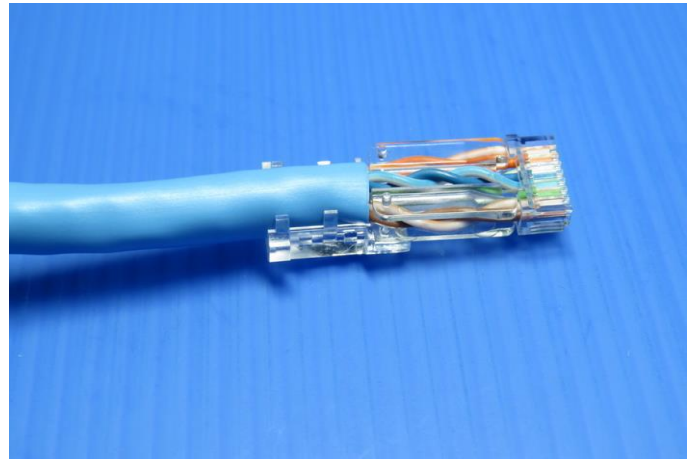


8. Put the upper cap and note the indent of cap to be connected with the bump of divider.

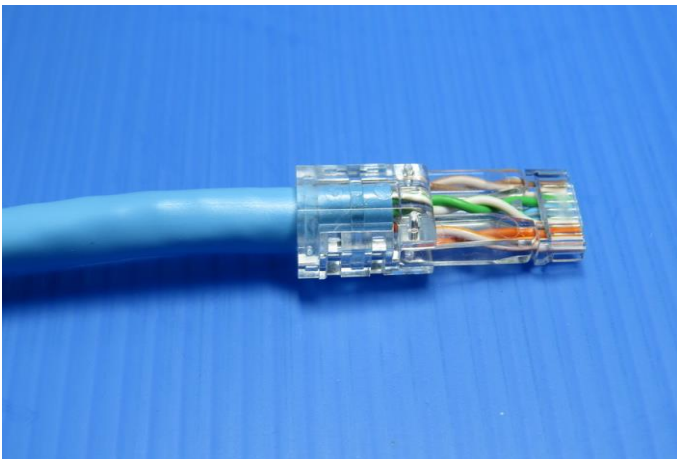


9. Put another cap and note the indent of cap to be connected with the bump of divider.



10. Slide all terminated parts into the plug body.

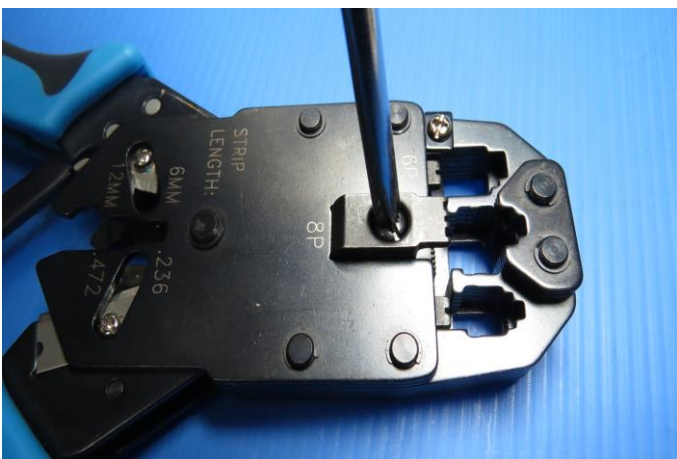

11. Take off the die set of cable strain relief from Tool.

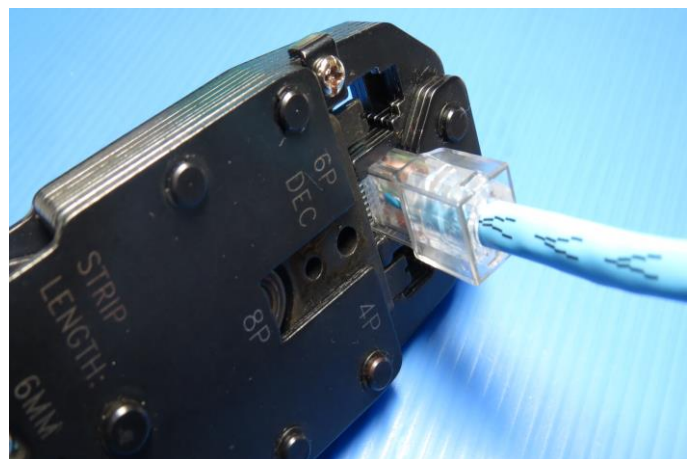


12. Only crimp the front part on contact pins.



乾羅科技股份有限公司

Plug Master Industrial Co.,Ltd.

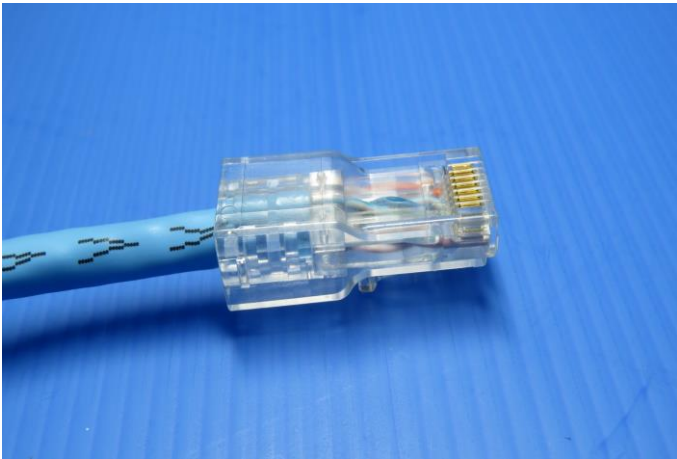

13. After crimping.



14. Finished.